

MICROWAVE COZY

No more burnt fingers after heating up leftovers in the microwave oven!

Description

Pull out your scraps and bust out a gift that will be appreciated by young and old alike! No more burnt fingers!

Supplies

1/3 yard each of two cotton fabrics and cotton batting. This will allow for four cozys made of two fabric patterns, each.

Thread, embroidery floss, needle, wonder-clips, scissors, sewing machine, steam iron, ruler, rotary cutter and mat, chalk marker.

RSO=right sides out;
RST=right sides together;
RSD=right side down;
RSU=right side up

Finished box: 8"x8"x3" square cozy bowl

Note: this pattern may not be copied without permission, but you may make a few of these to give or sell, as long as they are not mass produced!




Instructions

1. Cut two contrast fabrics 10.5" x 10.5". Now cut two cotton batting squares 10.5" x 10.5". Stack each fabrics RSD, each with a piece of batting on top.

2. Using chalk and a ruler, mark lines on batting corner to corner, middle vertical and horizontal. Center a CD disc on the batting center, and trace around circle.

3. Stitch all four straight lines through batting and fabric layers. *Do not stitch circle yet.*

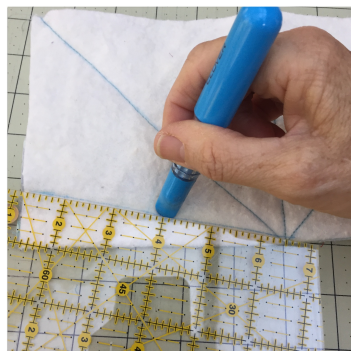

4. Make a total of four darts by marking a line from 5/8" from edge of straight line to outer edge of circle. Stitch each dart by pinching at mark, ending at outer edge of circle. Trim darts to 1/4".

5. Now top stitch the circle through all layers

6. Use wonder clips to secure all four sides, leaving a 2" opening. Trim corners, then turn RSO.

7. Press with iron. Use decorative stitch to top stitch around all four edges, securing opening closed.

